


devola
Comfortable living everyday

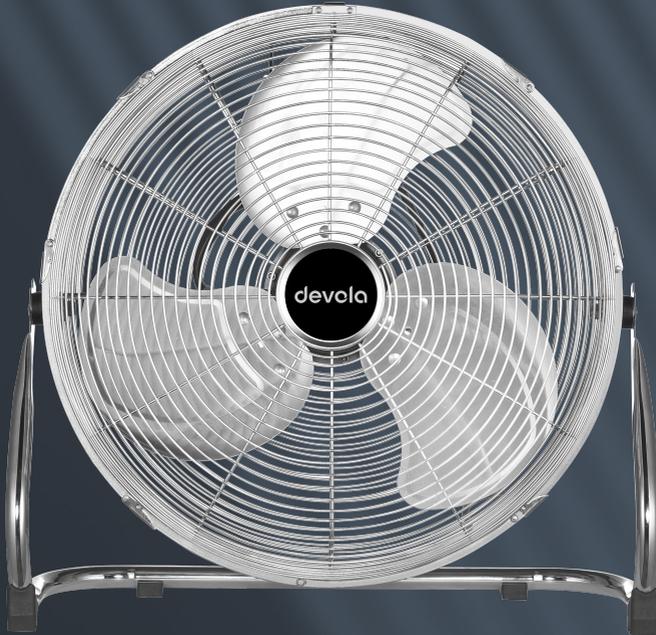

Floor Air Circulator Fan

DV12FFC / DV12FFB / DV16FFC / DV16FFB / DV20FFC / DV20FFB

Instruction Manual


devola.co.uk

Thank you for choosing Devola

Congratulations on the purchase of your new Devola product. Please read the following instructions carefully and follow them to prevent possible damages. We assume no liability for damage caused by disregard of the instructions and improper use.

Contents

Safety information	1
Product features	3
Operation	4
Cleaning and maintenance	5
Warranty	6

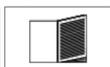 

Please read the USER MANUAL carefully before operation

Safety instructions

Please read these important safety instructions carefully before using the appliance. They are intended to help prevent fire, electric shock, injury or property damage.

- **Use this appliance only as described in this manual.** Any other use may result in fire, electrical shock, or injury. This will also invalidate the warranty.
- This appliance may be used by children aged 8 years and older, as well as by individuals with reduced physical, sensory, or mental capabilities, or those lacking experience or knowledge, provided they have been properly supervised or instructed on the safe use of the appliance and understand the associated risks.
- **Children must not play with the appliance.** Cleaning and maintenance must not be carried out by children without appropriate supervision.
- **Children under the age of 3 must be kept away from the appliance at all times** unless under continuous supervision.
- **Children aged between 3 and 8 years may only switch the appliance on or off,** and only if it has been installed in its normal operating position and they have been supervised or instructed on its safe use and fully understand the potential hazards.
- **Children between 3 and 8 years of age must not plug in,** adjust settings, clean, or perform any maintenance on the appliance.
- Always connect the appliance to a **properly earthed 220–240V AC power supply.**
- Avoid using a high-wattage appliance on the same electrical circuit.
- **Do not use the appliance if the power cord or plug is damaged.** Contact the manufacturer.
- **Do not extend the power cord** or use extension leads.
- The socket-outlet must be accessible at all times to enable the mains plug to be disconnected as quickly as possible.
- Avoid placing the power cable in areas where it may become a **tripping hazard.**
- **Do not pull, kink or wrap the power cable** around the appliance as this may weaken the internal wires.
- This appliance is intended for indoor use only. Do not operate the appliance outdoors.
- **Place the appliance on a flat, stable surface** in an upright position. Operating in any other position could cause a hazard.
- **Never cover the appliance.** Covering it may cause it to overheat and catch fire.
- **DO NOT** place the appliance:
 - o Within 50cm of objects, such as curtains, furniture, paper, bedding.
 - o Within 1.5 metres of any flammable objects.
 - o With the safety guard removed.
- **Do not use in areas with flammable gases, vapours or dust** (e.g. garages or workshops).
- Ensure the appliance is **never positioned where it could fall into water.**

- Never operate the appliance with **wet hands** or pull the plug out by the cord.
- The switch or controller **must not be reachable from any bodies of water**.
- **Do not insert fingers or objects** into the appliance when in operation.
- **Do not leave the appliance on unattended** or while sleeping.
- Before cleaning or repositioning:
 - Switch the appliance off.
 - Unplug from the mains.
- Only clean the appliance with a **soft cloth** - no solvents or abrasives.
- You may notice a faint odour when the appliance is used for the first time. This is completely normal and will fade within a few minutes.
- **Do not attempt to open**, repair or modify the appliance yourself. Contact the manufacturer.

Warning

Failure to follow these instructions could lead to severe consequences, including explosion, property damage, injury, or even death.

To avoid danger of suffocation please remove all packaging materials particularly plastic and EPS and keep these away from vulnerable people, children and babies.


To avoid the risk of accidental strangulation from the supply cord all children and vulnerable people must be supervised when in the vicinity of the product whether it is working or not.

Specification	DV12FFC	DV12FFB	DV16FFC	DV16FFB	DV20FFC	DV20FFB
Voltage	220-240V	220-240V	220-240V	220-240V	220-240V	220-240V
Frequency	50Hz	50Hz	50Hz	50Hz	50Hz	50Hz
Power	45W	45W	65W	65W	150W	150W
Size	12"	12"	16"	16"	20"	20"
Product Size (mm)	400x215x390	400x215x390	498x487x194	498x487x194	620x580x218	620x580x218
Product Weight	2.5kg	2.5kg	4.2kg	4.2kg	6.4kg	6.4kg
Colour	Chrome	Black	Chrome	Black	Chrome	Black


Note: The images and illustrations in this user manual are provided for demonstration purposes only. Actual product design, features, and appearance may vary slightly depending on the model or specification.

Features

1. On/Off & Speed Control
2. Fan Blades
3. Power Cable & Socket
4. Safety Grill
5. Carry Handle
6. Motor
7. Stand
8. Safety Screws/Secure Clips
9. Rubber Feet
10. Adjusting Nuts
11. Power Cable Storage

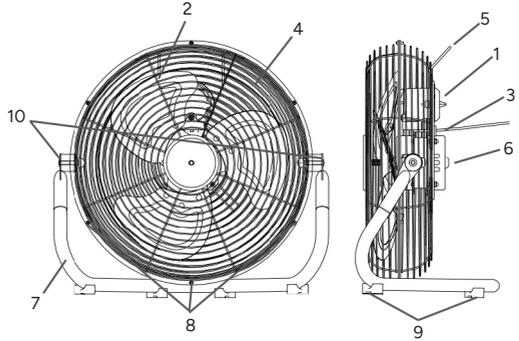


Product Features for DV12

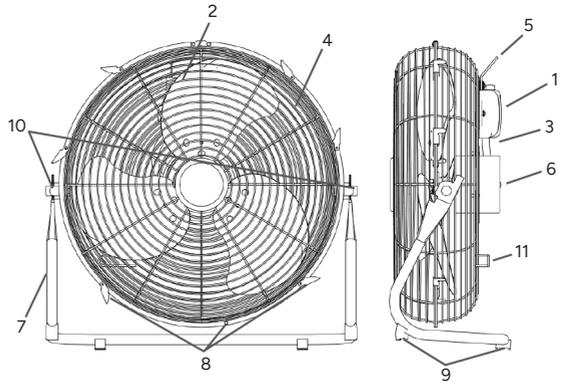

Product Features for DV16 & DV20

Assembly for DV12

1. Remove contents from the box.
2. Attach the bottom part of the stand to the two metal arms by pushing both metal buttons inwards and sliding both parts together until the buttons click into place.
3. Place the fan on a flat level floor and adjust the desired angle.
4. Connect the fan to a power outlet and turn the fan on.

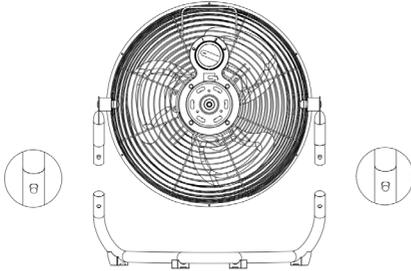

Assembly for DV16





1. Remove the fan from the box.
2. Place the fan on a flat, level floor.
3. Connect the fan to a power outlet and turn the fan on.

Note:

The angle can be adjusted only by gently tilting the fan head up or down. No tools, and no assembly steps are required.



Assembly for DV20

1. Remove the contents from the box.
2. Remove the caps from the angle adjustment nuts.
3. Install the tightening nut and turn clockwise on each side. As shown in the diagram.
4. Install the knob according to the installation steps in the following diagram.
5. Place the fan on a flat level floor and adjust the desired angle.
6. Connect the fan to a power outlet and turn the fan on.

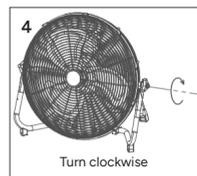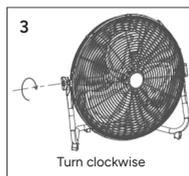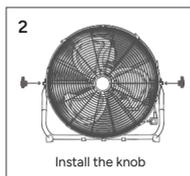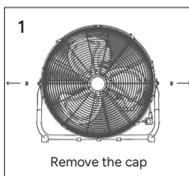


Operating

- Use the buttons/dial at the back of the fan to control the speed.
- 0 off
- 1 Low speed
- 2 Medium speed
- 3 High speed

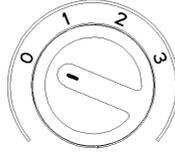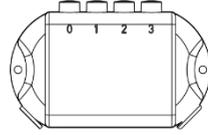Speed Control for DV12**Speed Control for DV16 & DV20****Angle Adjustment**


Before changing the tilt angle, ensure it is switched off.
Gently move the fan to your preferred position using light pressure.

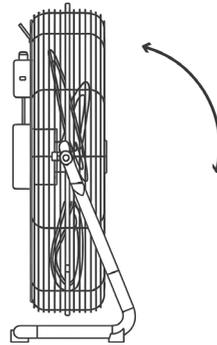

Please follow the cleaning and maintenance instruction carefully. Failure to follow these guidelines may void your warranty.

Cleaning the appliance

- Always switch off the appliance and unplug it from the socket before cleaning.
- Unscrew or unclip the secure screws/clips around the rim of the safety grill.
- Slide the top half of the safety grill upward to release it.
- Use a duster or soft dry cloth to remove any dust on the fan blades and safety grill.
- Replace the top half of the safety grill, safety screw and clips before using the fan again.
- Operating the appliance in an unclean or obstructed condition may lead to damage or reduced performance and may void the warranty.

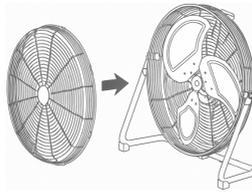

Storage

If the appliance will not be used for a prolonged period, especially in humid or coastal areas, make sure it is:

- Fully cleaned and dried.
- Stored in safe packaging to protect against dust and moisture, ideally in the original packaging.
- Kept in a dry, indoor location out of reach of children.
- By following these steps, you'll help maintain the performance, appearance, and safety of your appliance for years to come.

Repairs & servicing

- The appliance contains no user-serviceable parts.
- Do not attempt to repair or modify any electrical or mechanical components.
- If the appliance is damaged, defective, or not working correctly, contact the manufacturer.

Extend your Devola warranty for free

Register your product within 30 days of purchase

When you register your Devola product on our website within 30 days of purchase, we'll extend your standard manufacturer's warranty by an additional 12 months from the point of purchase – completely free of charge.

Register on the Devola website using the QR code below



If your product develops a fault within the warranty period, we'll either:

- Repair it at no extra cost
- Replace it with a new or refurbished item of similar condition
- Cover any necessary postage costs

Please note:

- The warranty does not cover issues caused by general wear and tear, improper use, or damage not resulting from defects in materials or workmanship.
- Tampering with or opening the product will void your warranty.

If something goes wrong, get in touch with our **Customer Care Team** first. They'll guide you through the warranty process and ensure things are resolved smoothly.



UK
CA



Recycle unwanted materials instead of disposing of them. All appliances and packaging should be sorted and tendered at a regional recycling centre and be processed in an environmentally friendly manner.

Product registration.

Register your warranty online
within 30 days of purchase.

www.devola.co.uk/warranty

Technical details.



Support.

Address

Unit 1, Reedswood Park Road
Walsall WS2 8DQ

Helpline

0800 043 4243

Email

info@devola.co.uk

devola.co.uk